



307DMK2A

OWNER'S MANUAL: 090001-14970700

ENGLISH

OWNER'S MANUAL

Thank you for purchasing this product.

Please read this owner's manual before assembling and using the product.

An accident or injury can result if the stand is incorrectly assembled or unspecified parts are used.

After assembly, keep this manual for future reference.

Contents

Before installation

Parts list	8
Safety guidelines	9
Checklist before use	9

Installation

Removing the speaker	10
Assembling the speaker stand	11
Connecting the speaker cable	11
Adjusting the vertical angle of the speaker	12

Parts list

 
Check that all of the following items are present

For 307DMK2A



1 Column

X1



2 Base plate

X1



3 Hexagon socket head bolt

X1



4 Cable guide

X1



5 Owner's Manual

X1

ENGLISH

Safety guidelines

The following WARNING and CAUTION signs are used throughout this owner's manual as well as on the product. These signs alert the installer and users of important safety information to avoid risk of injury and damages to the product. Make sure that you familiarise yourself with these symbols and their meaning.



Warning

The information following this sign indicate situations where failure to follow the instructions may result in death or severe injury.



Caution

The instructions which follow this sign indicate situations where failure to follow the instructions could cause injury when using the product or physical damage to equipment and surroundings.



Tip

This section contains information that can help to prevent problems and damage to the unit, and other useful information.



Warning

- Do not install this product in high places. It may fall down and cause injury.



Caution

- This stand is meant for use with the TD307MK2A and TD307 II speaker. Do not use the stand for other purposes.
- Assemble the stand on a level surface. Placing the stand on an uneven surface can lead to it falling over and result in an injury.
- Do not place the stand where people regularly move past it. Bumping into the stand can cause an injury.
- Place the stand on a solid and level floor. Installing the stand in a location that is unstable can cause it to fall and result in an injury.
- Do not drop or drag this unit while assembling or carrying it. Pushing over or dragging the stand can result in an injury or cause damage to the floor.
- Do not climb onto or hang from the stand. Be especially careful about children trying to do this. It may fall over or break and cause injury.
- The stand is heavy, so take care when unpacking or moving it. Improper lifting can cause a back injury and dropping the stand can injure feet.

Checklist before use

- This is a stand for a speaker system. Avoid using the stand for other purposes.
- The stand is very heavy. Use caution when handling it.
- Be careful not to tip over the stand.
- Be careful that the speaker system does not fall from the stand.
- If the stand becomes dirty, clean it by lightly wiping with a soft cloth, using a neutral detergent if necessary. Do not use a substance like thinner or benzene.

Installation

– Removing the speaker –


- 1 Remove the hexagonal nut and washer which secures the speaker and speaker arm together.
- 2 Remove the speaker arm from the speaker.

Caution

- The speaker is heavy, so hold it firmly while removing it from the speaker arm.
- After removing the speaker, place it on a surface that will not mark it or allow it to roll around.

Tip

The speaker arm and speaker base are not required when using the stand.
Give it to the customer for future use if the configuration is changed.

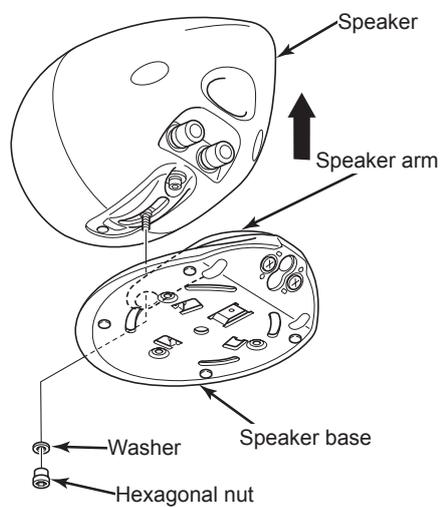


– Assembling the speaker stand –

- 1 Install the cable guide and column to the base plate with the hexagonal socket head bolt.



Tip

Align the positioning label on the column with the label on the base plate.

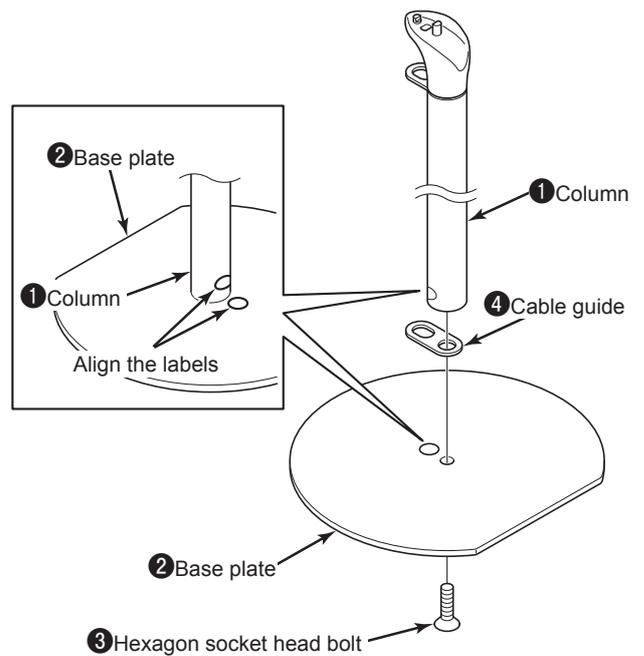


- 2 Place the speaker onto the column, and then secure it with the washer and the hexagonal nut.



Caution

- Securely tighten the washer and the hexagonal nut.
- Be careful not to damage the base of the speaker when placing the speaker onto the stand.

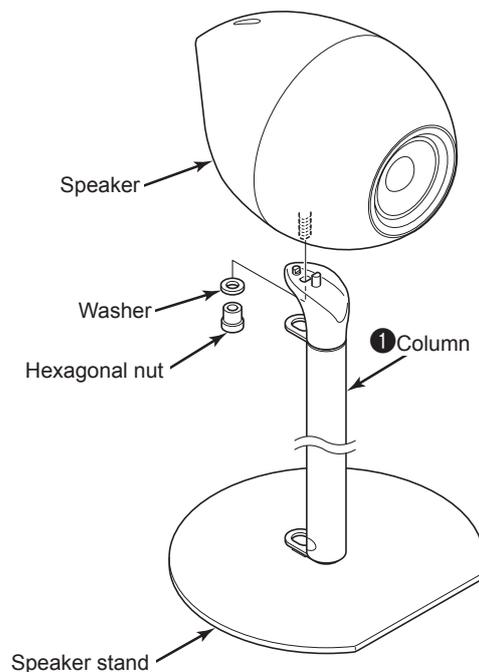

– Connecting the speaker cable –

- 1 Insert the bare ends of the speaker cable into the holes in the speaker input terminals and secure them in place.




Caution

When connecting the speaker cables, insert the bare ends of the speaker cables correctly so that they do not touch neighboring terminals, otherwise it may cause short-circuits.




Tip

If the speaker cables are routed through the cable guide on the stand when connecting the speaker cables to the speaker, it will improve the outer appearance of the speaker. (for diameter of less than 7 mm)

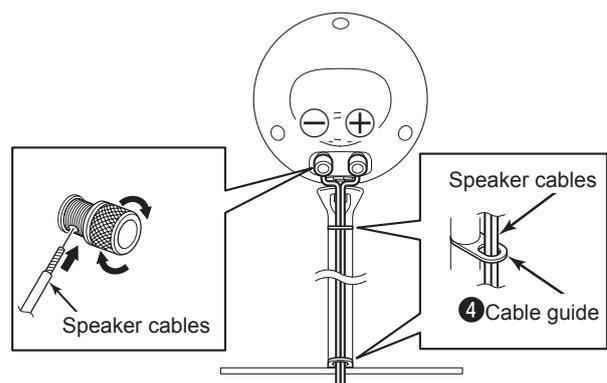

– Adjusting the vertical angle of the speaker –

- 1 Loosen the vertical angle adjustment bolt at the bottom of the speaker.

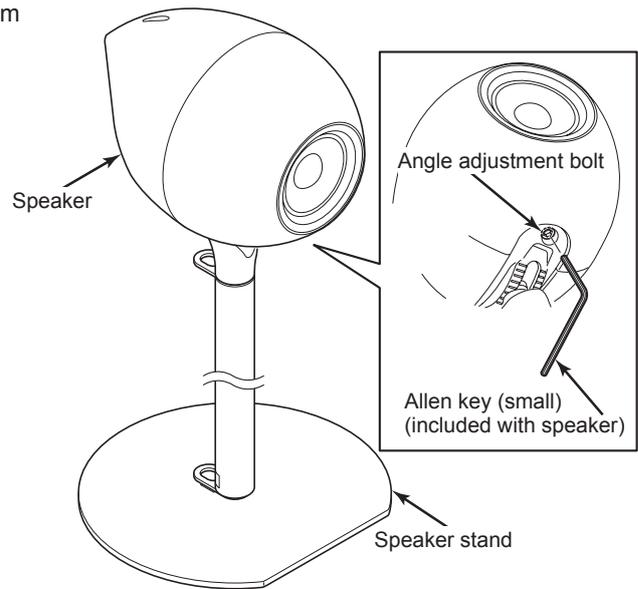


- 2 Adjust the speaker to the desired angle.

Caution

- Be careful not to knock over the speaker stand when adjusting the angle.
- The speaker will not move sideways.

Tip

The angle of the speaker can be adjusted within the range of +20° to -10°.

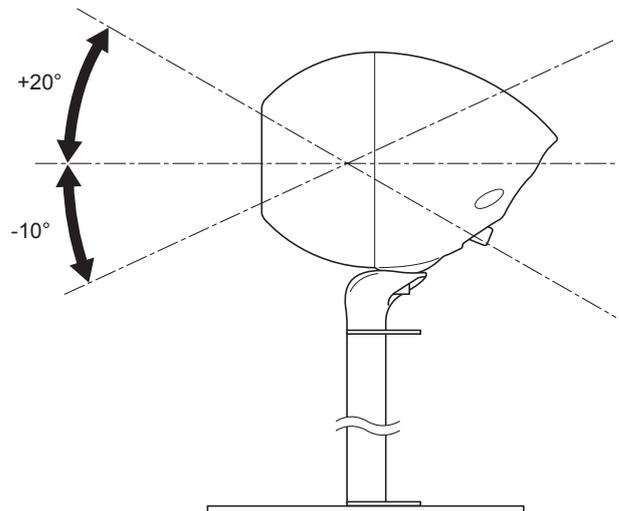

- 3 Tighten the vertical angle adjustment bolt.

Caution

Securely tighten the vertical angle adjustment bolt.